


Filter pipe with filter holder & filters for HAKKO 807 Precautions

When removing the filter holder from the filter pipe:
Do not nip and draw out the filter holder with pliers.
Doing so may break the holder.

Remove the holder by hand after cooling it down, or
by turning the filter pipe gradually while holding
the outside of the holder with pliers.

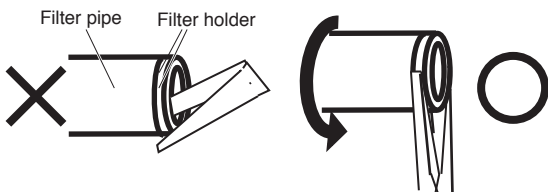

When attaching the spring filter:
Insert the filter holder into the wide end of the
spring filter and push it firmly into place.



Stretching the spring filter or allowing gaps between
the coils will reduce the service life and effectiveness
of the filter. If the filter displays either of these
conditions, replace it with a new one.

When attaching the filter pipe:
Insert the filter holder into the filter pipe so
that no gap is found between them.



When attaching the ceramic paper filter:
Insert the ceramic paper filter (L) into the filter
holder from the opposite side of the spring filter.
Make sure that no gap is found between the ceramic
paper filter (L) and the pipe.

